

 
MVR FLASHLIGHT*

USER GUIDE


Please read this manual carefully and thoroughly. Retain it for future use.

Product Overview


Top:

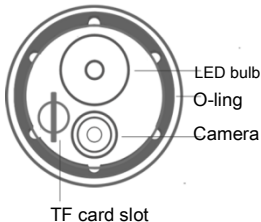

Bottom:

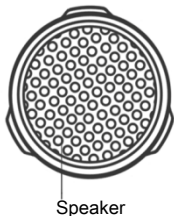 

Buttons Pad:

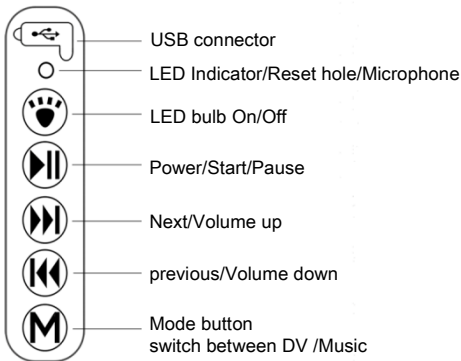 


Getting started

Card installation/replacement:

Install the storage card if it is not being preinstalled. Use the supplied triangle opener to remove the O-ring by rotating counter clock-wise, then remove the cover glass to access the card slot.

 Supported micro SD card: 2G/4G/8G/16G/32G.

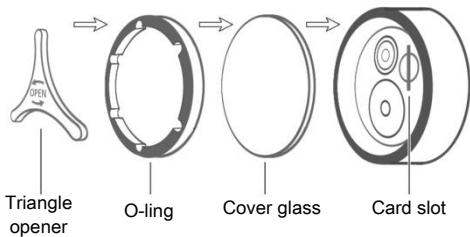

Charging the battery:


It is recommended that you fully charge the preinstalled battery before first use.


- 1). Connect your flashlight to the power adapter using the USB cable provided.
- 2). Plug in the power adapter to an electrical outlet to start charging the battery.

As the battery is being charged, the LED indicator shows green and blinks. When the battery is fully charged, the indicator turns to solid green.



Basic Operations

To turn the unit on, firmly press  button till the green LED indicator turns on, release the button, the indicator turns to solid blue.

To turn the unit off, firmly press  button till the LED indicator turns off.

When the LED indicator shows solid blue, press



button once to start video recording. The LED turns to green and blinks.

To stop video recording, press button once again, the indicator turns to solid blue.

When the recording duration exceeds 15 minutes, the video data will be saved once, and then go on recording automatically.

720P/480P Switch: Factory default set: 720P.

To switch between 720P/480P, press the **M** and **▶||** buttons once in same time.



When the LED indicator shows solid blue, press button **▶||** once to take a photo, the indicator blinks 4 times and turns to solid blue.

When the LED indicator shows solid blue, press button **||◀◀** once to start sound recording, the indicator shows green and blinks.

To stop sound recording, press the **▶||** button once again, the indicator turns to solid blue.



Basic Operations




(continued)

You need to copy music files to your storage card first. Connect the flashlight to your computer, create a folder named Music inside the storage card of your flashlight, then copy the MP3 or WMA files to this folder.



Music Playback

Switch to music mode: When the indicator



shows solid blue, press  button once to enter music mode. The indicator turns off, music goes out from the speaker. To quit the music mode, press  button once again. the indicator turns to solid blue.

Select Song:  Press  or  button once to select next or previous song.

Volume Control: Press and hold  button to increase the volume, Press and hold  decrease the volume.

* You  click  button to pause or continue the music playback.



To power on the light, press  button once. Next, the  button can be pressed to move from light settings: Hight light, Low Light, Safety Strobe(S.O.S.), and OFF.

Basic Operations (continued)

Setting date and time:

- 1). Connect the flashlight to your computer, the storage card is recognized as a removable disk on your computer.
- 2). A sample file **Time.txt** is included in the product CD-ROM, copy this file and paste it into the root of the removable disk. Open the file, correct the date

Settings

and time, and then save.

3). Unplug the flashlight from the computer.

4). Firmly press button to turn your flashlight on, the new date and time is updated.

Fault reset:

When a fault occurs, you can try the reset function to solve the fault. The Reset button is inside the Reset hole. Use a needle (or a toothpick) insert into the reset hole to press the Reset button once.



1) To avoid data lose or malfunction, do not connect the flashlight to your computer when it is on recording status.

2) The product is not waterproof type. Water may cause trouble for the product.

3) Besides that the cover glass can be opened by triangle opener, never attempt to open the other parts or remove any internal components. Doing so can potentially damage the flashlight and void the warranty.

Product CD-ROM & Accessory



User Manual.pdf

This manual.

Additional Operations Guide.pdf

Additional operation guide for:

1).Motion detection auto recording function.

2).PC-camera function.

- 3).Emergency alarm function.
- 4).Working with power adapter.
- 5).Setting image resolution.
- 6).Product specification table.

Time.txt

Sample file for date and time setting.

Card Secure Pro (file folder)

Password tool and instructions. (only available for special type.)

* The contents of the disc is subject to change due to the firmware upgrading.



- ng
sory
- ' User manual
 - ' CD-ROM
 - ' USB connector cable
 - ' Power adapter
 - ' Triangle opener
 - ' Mounting clip (optional)